

# Epic Surfskis

Owner's manual





# Contents

Product overview .....	5
Storage .....	6
Setup and adjustments .....	8
After paddling.....	11
Transportation .....	12
Warning .....	14
Paddler safety.....	15
Contact details .....	16

 
# Product care guide

## **Congratulations on the purchase of your Epic Surfski!**


An EPIC surfski is constructed with high quality durable composite materials to create a stiff, light and rugged kayak. With proper care, the hull will maintain its quality for many years of enjoyable use. For your convenience, we have put together the following care tips. If you have any further questions, feel free to contact us.

# Product overview


1. Smart Track Kick Up rudder (optional on some surfskis)
2. Ergonomic Handle (If applicable)
3. Surfski Rudder
4. Rudder Hatch
5. Storage Hatch (If applicable)
6. On Deck Storage with bungee cord
7. Side Handles (If applicable)
8. Water Bottle holder
9. Leg Leash attachment point
10. Bailer
11. Foot brace with steering pedals
12. Rudder line adjuster
13. Forward cockpit storage with bungee cord fastening
14. Breathable drain plug
15. Rudder line
16. Spreader bar for steering control
17. Rudder line feeder

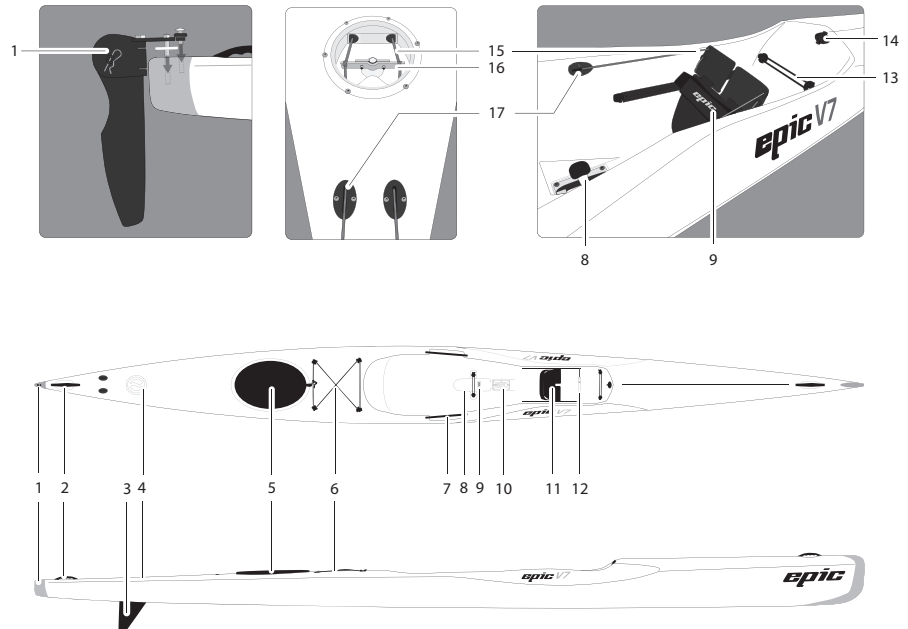


# Storage

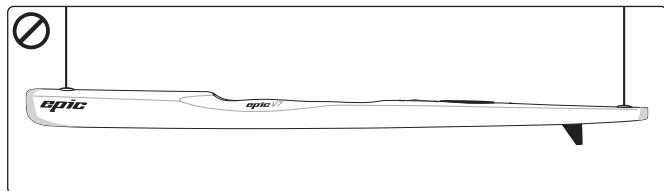 


Do NOT store hanging on its handles.

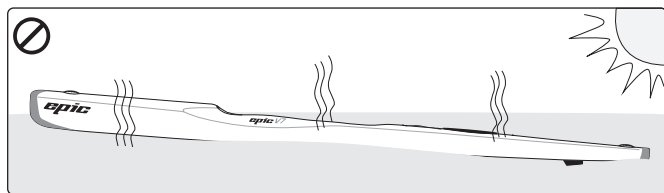 

 Do NOT leave your Epic under direct sunlight for prolonged periods of time. (Unless paddling)

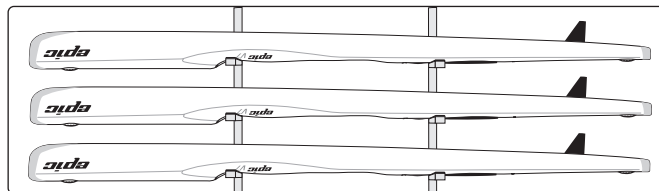

 Store your Epic Surfski on a separate padded rack for each surfski. Stacking the surfskis on top of each other may deform their shapes.

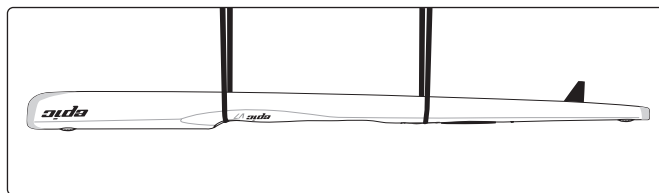

Use 5 cm (2 inches) wide straps to hang your Epic surfski. Place the straps at approximately 1/3 boat length from each side.

Storing your new Epic Surfski correctly is the first step to make sure it is well maintained and always in a good shape when you decide you want to enjoy some time on water. Your storage space may be slightly different to someone else but you should aim to adapt it according to the following basic principles:

- Never hang your Surfski from the bow and stern handles. The sturdy handles are designed for carrying the kayak, but not for hanging the boat for extended periods.
- When storing your Surfski, it is best to support it with padded bars or racks, resting upside down. It can also be stored on its side resting on a padded surface.
- If you choose to hang your Surfski from a ceiling, use straps rather than rope to spread the load over a greater area, and hang it upside down with the straps approximately 1/3 distance from each end.
- Prolonged sun exposure can shorten the life of any kayak. The material utilizes ultraviolet stabilizers, but for the longest life, we recommend you keep the kayak inside or in the shade when not in use.
- If stored outside, check your Surfski occasionally to ensure any hatches are dry and free of dirt and mold.
- Always remember to tie your kayak down securely so that it does not get knocked off of the rack.



# Setup and adjustments

  Ready to go for a paddle? Take a little time to inspect and setup your Surfski before you take a trip to your selected paddling site. It is much easier to deal with unexpected issues in the comfort of your home rather than on the beach or even worse in the water. Follow these steps before you go:


- Inspect the entire length of your Surfski for damage or unusual deformation. Start from one end and work your way to the other one. Inspect the hull, deck, steering mechanism, rudder lines, bailer. All moving parts should work smoothly and be easy to operate and the rudder line should not have any chafing or damage. If you discover any damaged parts, replace the part before you go on water.
- If applicable on your model of Surfski, install the hatch cover correctly. Test the installation by trying to remove the cover without loosening the fastener. Re-inspect the hatch cover before launching to be sure it is properly attached and tightened.



- Properly tightened, the hatch cover is seaworthy and reliable. Should the cover come off during open water paddling, the rear hatch is exposed to swamping! Stop and reattach the cover immediately. Consider the use of a stern flotation bag in the rear hatch for added safety if attempting open water voyages in a Surfski with a hatch.
- Inspect the rudder lines and steering mechanism for wear and tear. Replace the rudder lines if you identify chaffing. Epic uses static Spectra cord for rudder lines. Contact your nearest Epic dealer or Epic Kayaks for replacement line.
- Attach a leg leash to the leash anchor point (Leg leash has to be purchased separately)

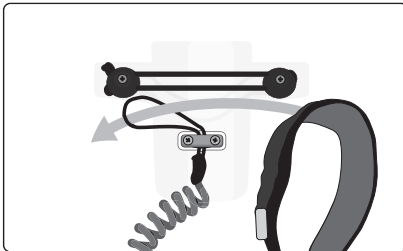
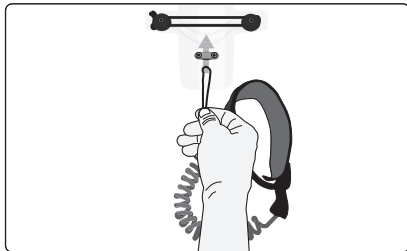


## • Adjust the length of the foot brace

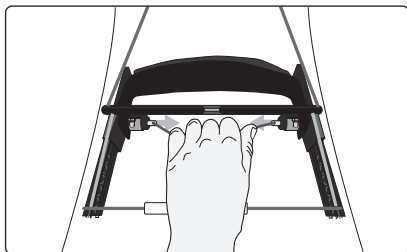 

Pull the line behind the foot rest to release lock pins from the rail.

  Adjust the length for proper fit by sliding the foot rest forward or back.

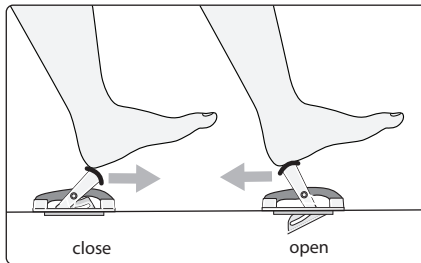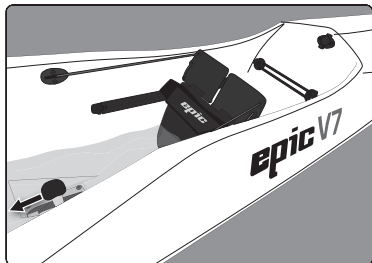


Open the bailer to drain any water out of the cockpit. Use your hand or one of your heels to push the lever back toward your body to "open" position.

**NOTE:** Water will drain out only while the Surfski is moving forward. If you are not moving or if you are moving in reverse, the water will go inside the cockpit.

# After paddling

 - A quick rinse with fresh water is recommended after every paddle to protect from salt and silt, which will not harm the hull and deck, but can keep moving parts from operating smoothly over time. Always rinse the moving parts (foot pedals, rudder, etc) and the aft rudder hatch to keep it clean.

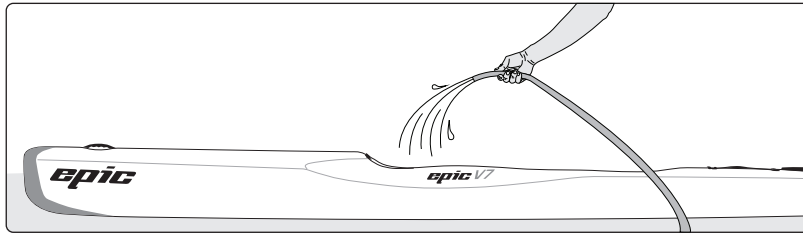


Rinse your Epic surfski with fresh water after each use.


- Avoid storing for long periods with any water inside the hull. Always drain any water, and if needed use a sponge to dry the aft hatch if applicable. Before replacing hatch cover, dry the hatch properly.

# Transportation

 - Always use padded crossbars, and transport your Surfski upside down to protect the integrity of the hull.

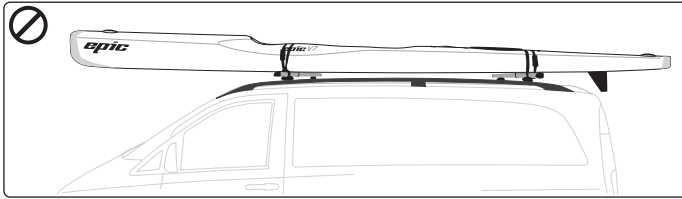


 Do NOT transport nor store your Epic in upright position on hard surfaces.

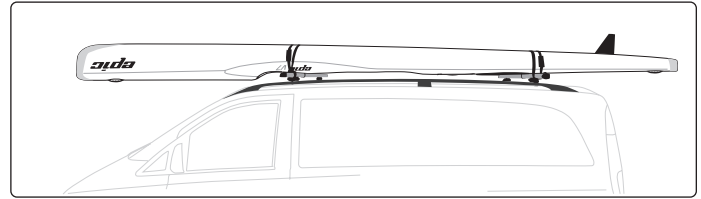

Transport your Epic upside down on flat bar padded roof racks.

 - Vertical bars called “stackers” or “J-cradles” allow a kayak to be carried on its side, with appropriate padding. Only transport the boat right side up if you have padded cradles that conform to the hull shape.

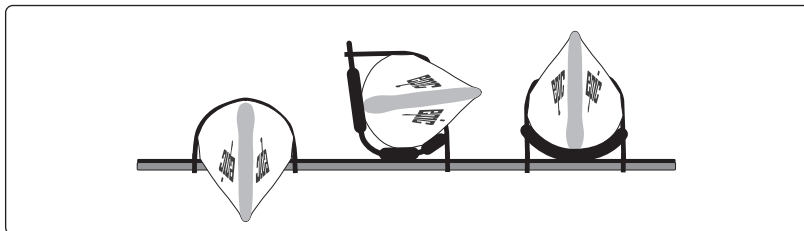

Correct way of transporting Epic Surfski on a padded roof rack with or without supporting cradles.

- Be cautious of using ratcheting straps, as they are easy to over tighten. Over tightening or strapping directly to an unpadded rack can damage the kayak.
- Surfskis can be secured to a rack with a lock and cable run through either the side handles or end handles.
- The failure of a single tie-down could cause the kayak to come loose; please consider using bow and stern lines attached to the front and rear of your vehicle for added security.

# Warning

- Dragging your Surfski to and from the water, beach launching or “seal launching” off rocks will damage the hull, ultimately shortening your kayak’s life and performance.
- PLEASE REMEMBER THAT DAMAGE TO YOUR CRAFT THROUGH WEAR AND TEAR IS NOT COVERED UNDER WARRANTY.

# Paddler safety

- Always use a leash tethered to the anchor point in your cockpit. Use a leg leash for open water paddling. Remove the leash when entering or exiting the surf zone. A paddle leash is best for surf zone use. Epic leashes are available from authorized Epic dealers.
- Know how to remount your surfski in the conditions that you intend to paddle in! Practice the surfski remount technique regularly, and be sure you can do it quickly, and confidently. Refer to online videos demonstrating the remount. Always wear an approved Personal Flotation Device, and appropriate insulating layers for the water temperature. Carry an emergency communication device such as a cell phone in a waterproof pouch, or a hand held marine radio. Never paddle alone!

# Contact details

[www.epickayaks.com](http://www.epickayaks.com)

645 Marina Drive,  
Charleston, SC 29492  
USA

Email: [info@epickayaks.com](mailto:info@epickayaks.com),

Phone: +1.843.884.4601